



1/5

9

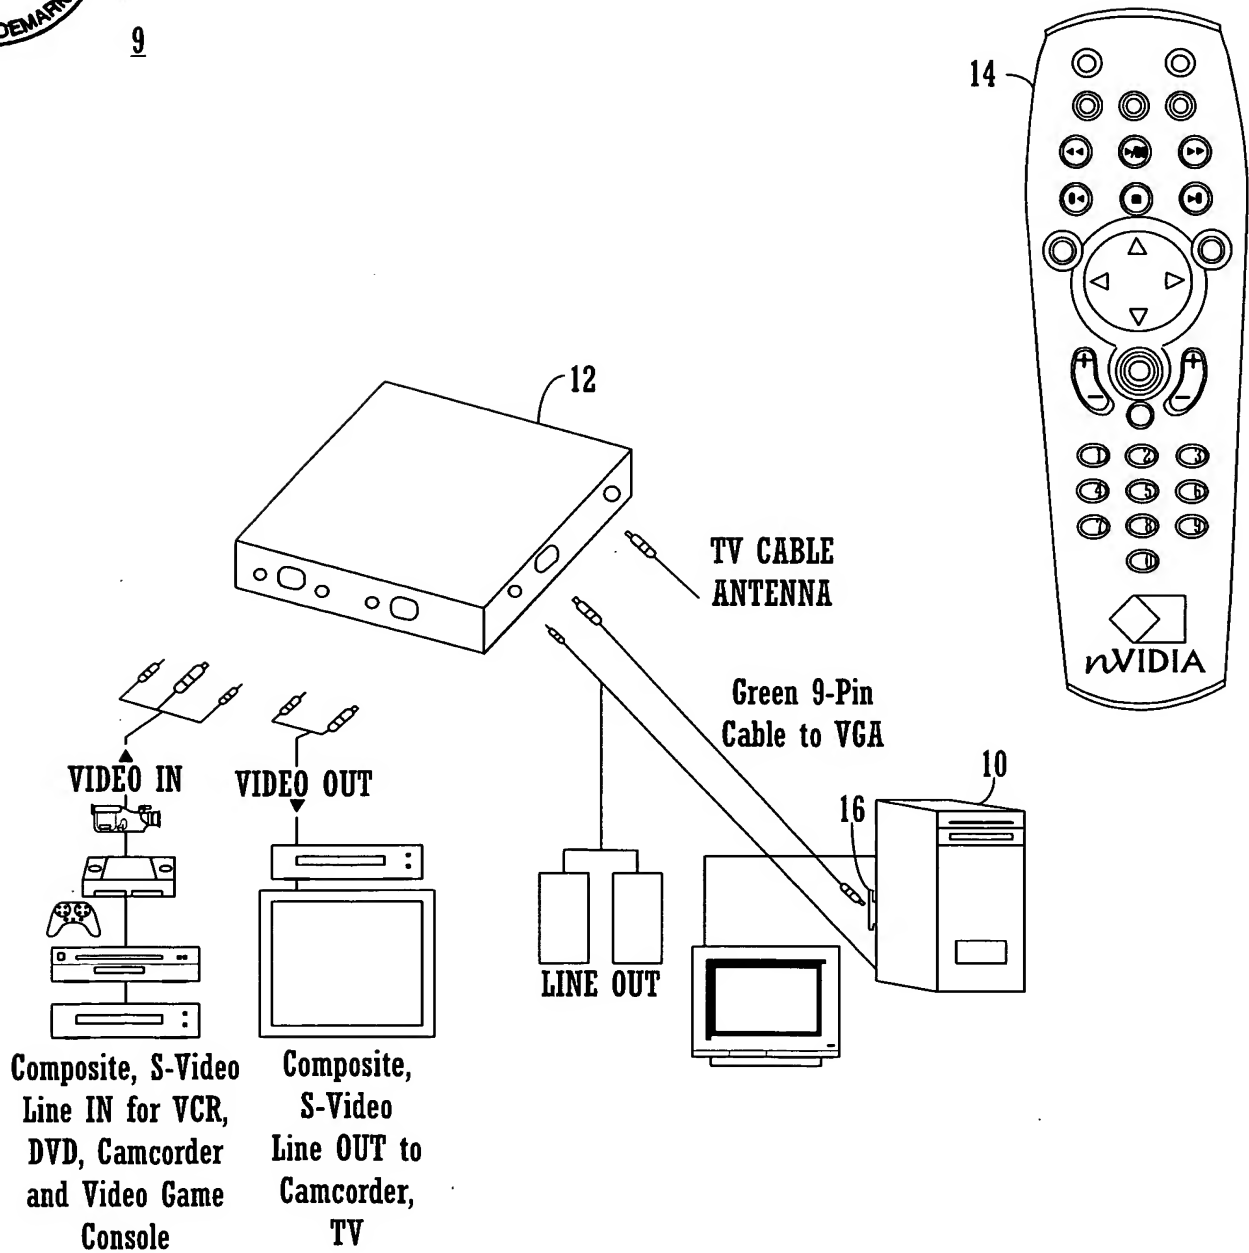


FIGURE 1

2/5

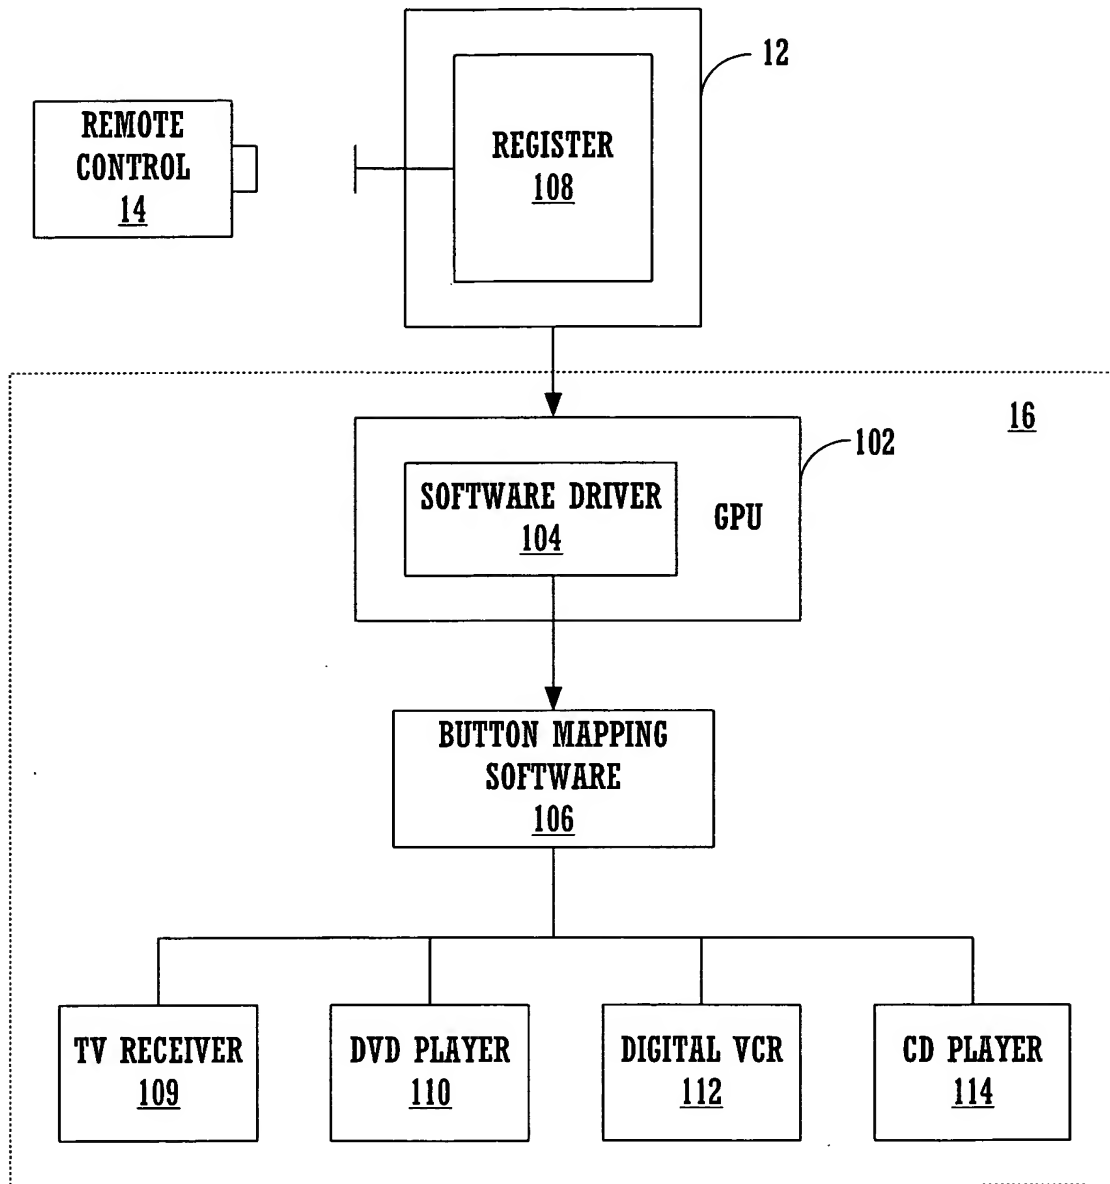


FIGURE 2

3/5

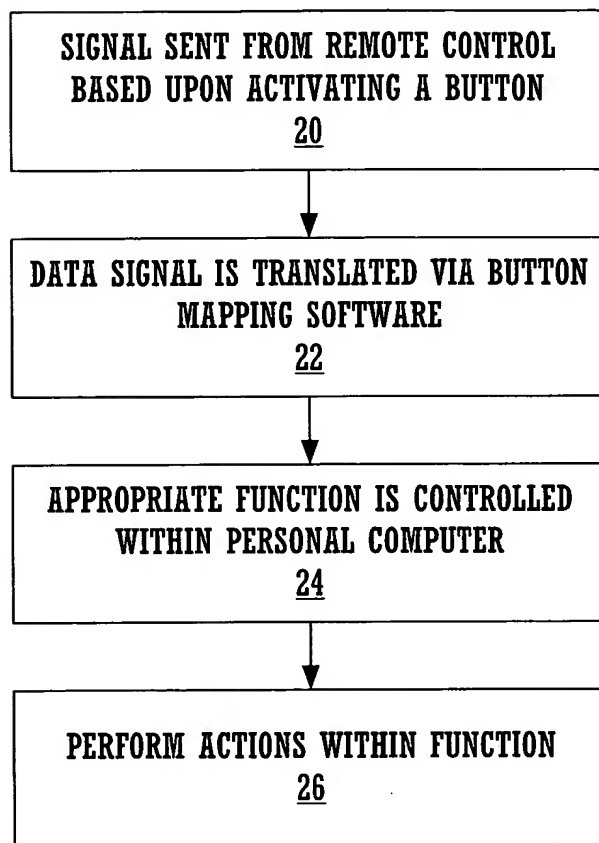


FIGURE 3

4/5

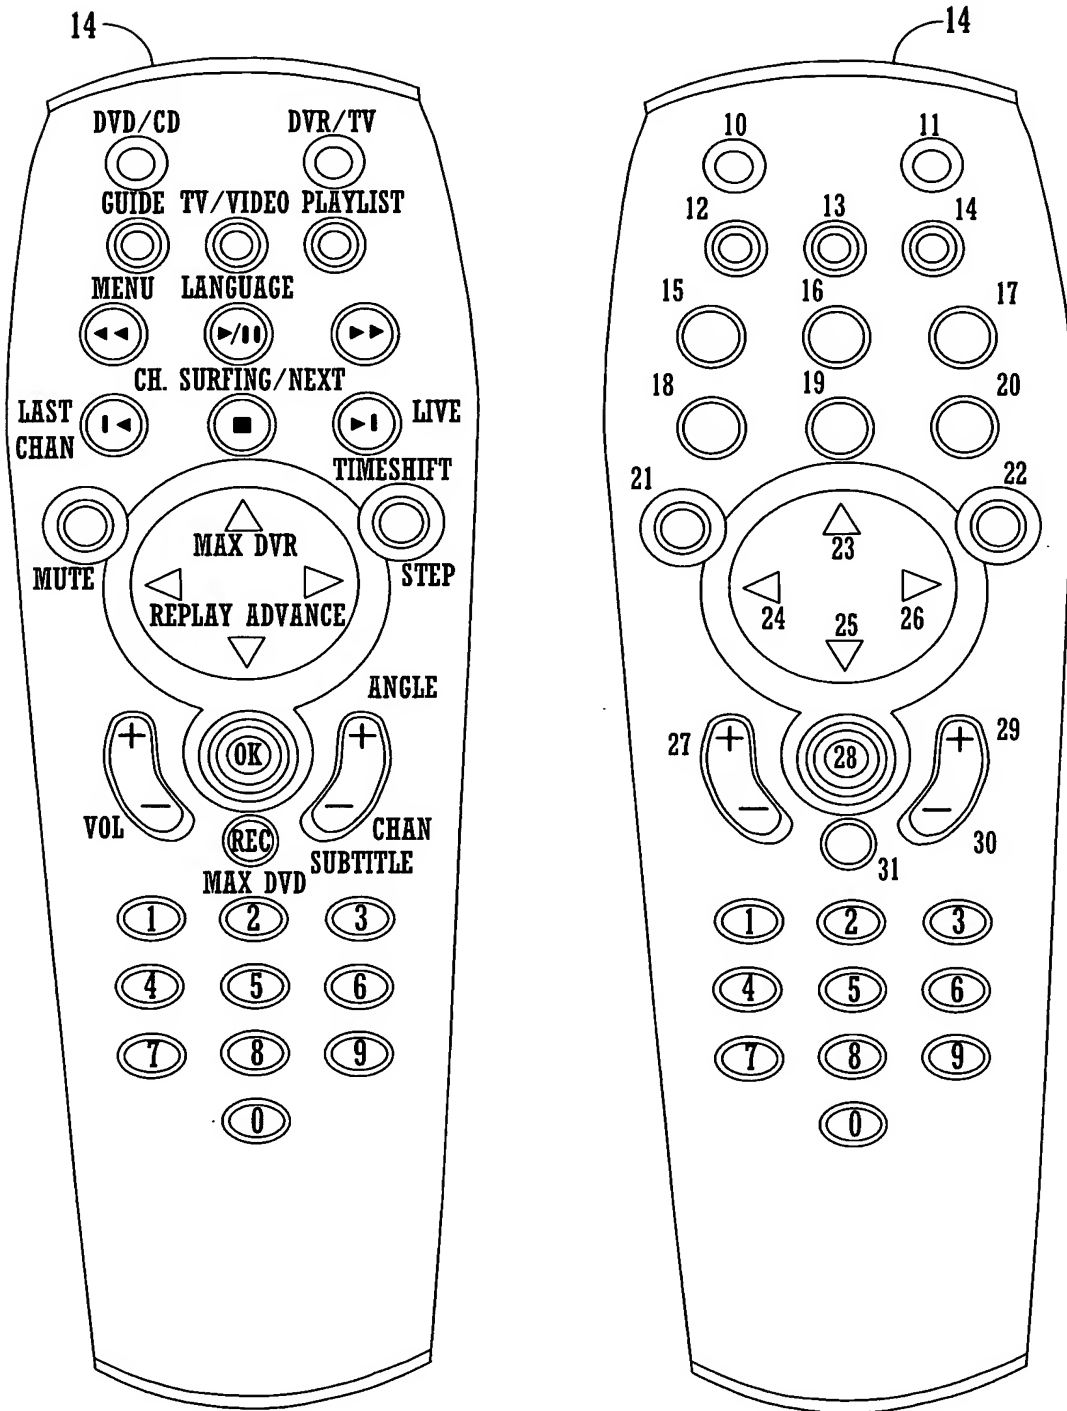


FIGURE 4

5/5

KEYS	IR CODE	DVD/CD FUNCTION	DVR FUNCTION
0-9	0x00-0x08	Number Keys	Number Keys
10	0x09	CD/DVD On/Off	N/A
11	N/A	N/A	TV/DVR On/Off
12	0x11	DVD Root Menu	EPG
13	0x12	DVD Language Select	Video Source Select
14	0x13	Enter	Playlist
15	0x14	Rewind	Rewind
16	0x15	Play/Pause	Play/Pause
17	0x16	Forward	Forward
18	0x17	Jump to previous chapter	Jump to last channel
19	0x18	Stop (Next)	Stop (Next) (Channel surfing)
20	0x19	Jump to next chapter	Go to Live TV while in Timeshift mode
21	0x20	Mute	Mute
22	0x21	Step in movies playing	Timeshift mode-enable TIVO-like functions
23	0x22	Up arrow	Full Screen TV toggle
24	0x23	Left arrow	Instant replay
25	0x24	Down arrow	Down arrow
26	0x25	Right arrow	Commercial Advance
27	0x26	Volume adjustment	Volume adjustment
28	0x27	OK/Select	OK/Select
29	0x28	DVD angle select	Channel up
30	0x29	DVD subtitle select	Channel down
31	0x30	Full Screen DVD toggle	Record

FIGURE 5